Personal Hygiene Appliance

Blooming Bidet

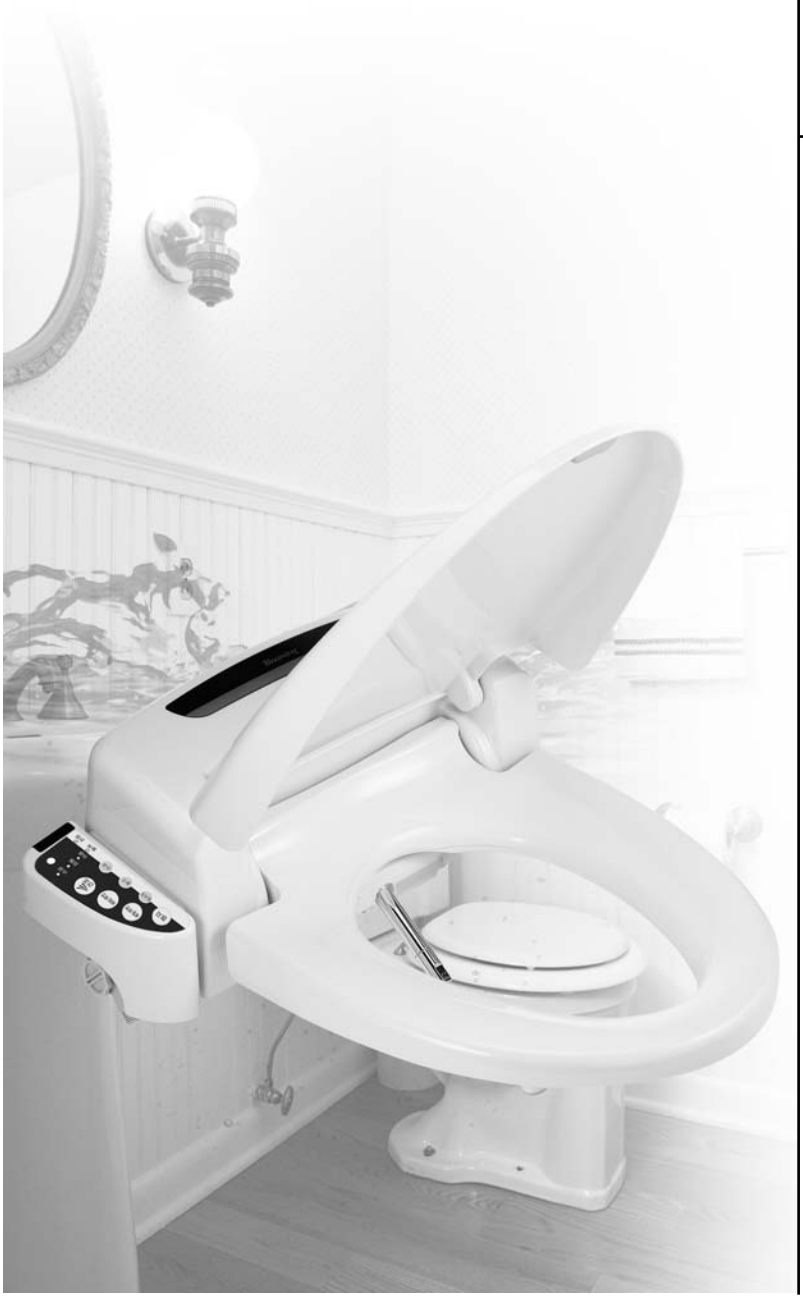

NB-R770E

Contents

	< English >	< Germany >
Important Safeguards	2	23
Parts Identification	5	26
Basic Instructions	7	28
Functions & Operation	8	29
Installation	12	33
Installation-Further Steps	15	36
Detachment	16	37
Maintenance	17	38
Water Tank Drainage	19	40
Troubleshooting	20	41
Product Specifications	21	42
Warranty	22	43

- **This product was manufactured for household use only.**
- **Read all operating instructions before installation and use.**
- **Please save this operating instruction manual and place in an easily accessible location.**
- **External appearance and specifications are subject to change for improvement of product without notice.**

Important Safeguards

READ ALL INSTRUCTIONS BEFORE USING.

DANGER To reduce the risk of electrocution.

- Do not use while bathing.
- Do not place or store product where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Do not reach for a product that has fallen into water. Unplug immediately.

WARNING To reduce the risk of bruns, electrocution, fire or injury to persons.

- Close supervision is necessary when this product is used by, on, or near children or invalids.
- Use this product only for its intended use as described in this manual.
  Do not use any attachments unless recommended by the manufacturer.
- Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
  Return the product to a service center for examination and repair.
- Keep the cord away from heated surfaces.
- Never block the air openings of the product or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- Never use while sleeping or drowsy.
- Never drop or insert any object into any opening or hose.
- Do not use outdoors. or operate where aerosol(spray) products are being used or were oxygen is being administered.
- Connect this product to a properly grounded outlet only.
  See Grounding Instructions.
- Any other servicing should be performed by an authorized service representative.
- Do not dismantle, repair, or alter the unit.
- Do not pour or spray water on to the unit.
- The unit must be grounded.
- Do not touch the power plug with wet hands.
- Properly connect the power cord to the electrical outlet corresponding to the rated voltage of the unit.

Important Safeguards

WARNING To reduce the risk of bruns, electrocution, fire or injury to persons.

- **Do not use damaged or loose power cord.**
- **Do not use steam cleaner.**
- **Keep the unit away from fires or inflammable substance.**
- **Do not connect to the industrial water supplies.**
- **Do not connect other electrical appliances to the same power socket connected to the unit.**
- **Replace damaged power code and plug by authorized service center.**
- **Caution against low temperature burns.**
- **Before removing the unit from the toilet bowl, disconnect the power plug first.**

CAUTION To reduce the risk of injury to persons or damage to the product or the property.

- **Do not place heavy objects or step on the unit.**
  It may cause product damage or injury.
- **When cleaning the unit, do not use any chemicals. Clean the unit with moist, well-wrung soft cloth. For excessive stains, use soft cloth moistened with mild dish-wash detergent and wipe out with dry cloth.**
  It may cause product damage.
- **Do not slam down the lid.**
  It may cause product defect.
- **Do not lean on the lid.**
  It may cause product defect.
- **When not in use for a long period of time, disconnect the power plug and drain the water tank.**
  Tank water may be contaminated and cause skin troubles.
- **Do not twist or pull the connection hoses.**
  It may affect water supply or cause water leakage.
- **Do not cover up the warm air outlet or insert hands or other objects.**
  It may cause burn or electric shock.
- **Do not operate the unit during product malfunction.**
  Disconnect the power plug and call the authorized service center.
  It may cause fire or electric shock if the unit is operated while it is out of order.

SAVE THESE INSTRUCTIONS

Important Safeguards

Marking

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract.
This product should not be mixed with other commercial wastes for disposal.

- **Ingress of water protection : IPX4 (Warm seat only)**

Parts Identification

Blooming Bidet NB-R770E

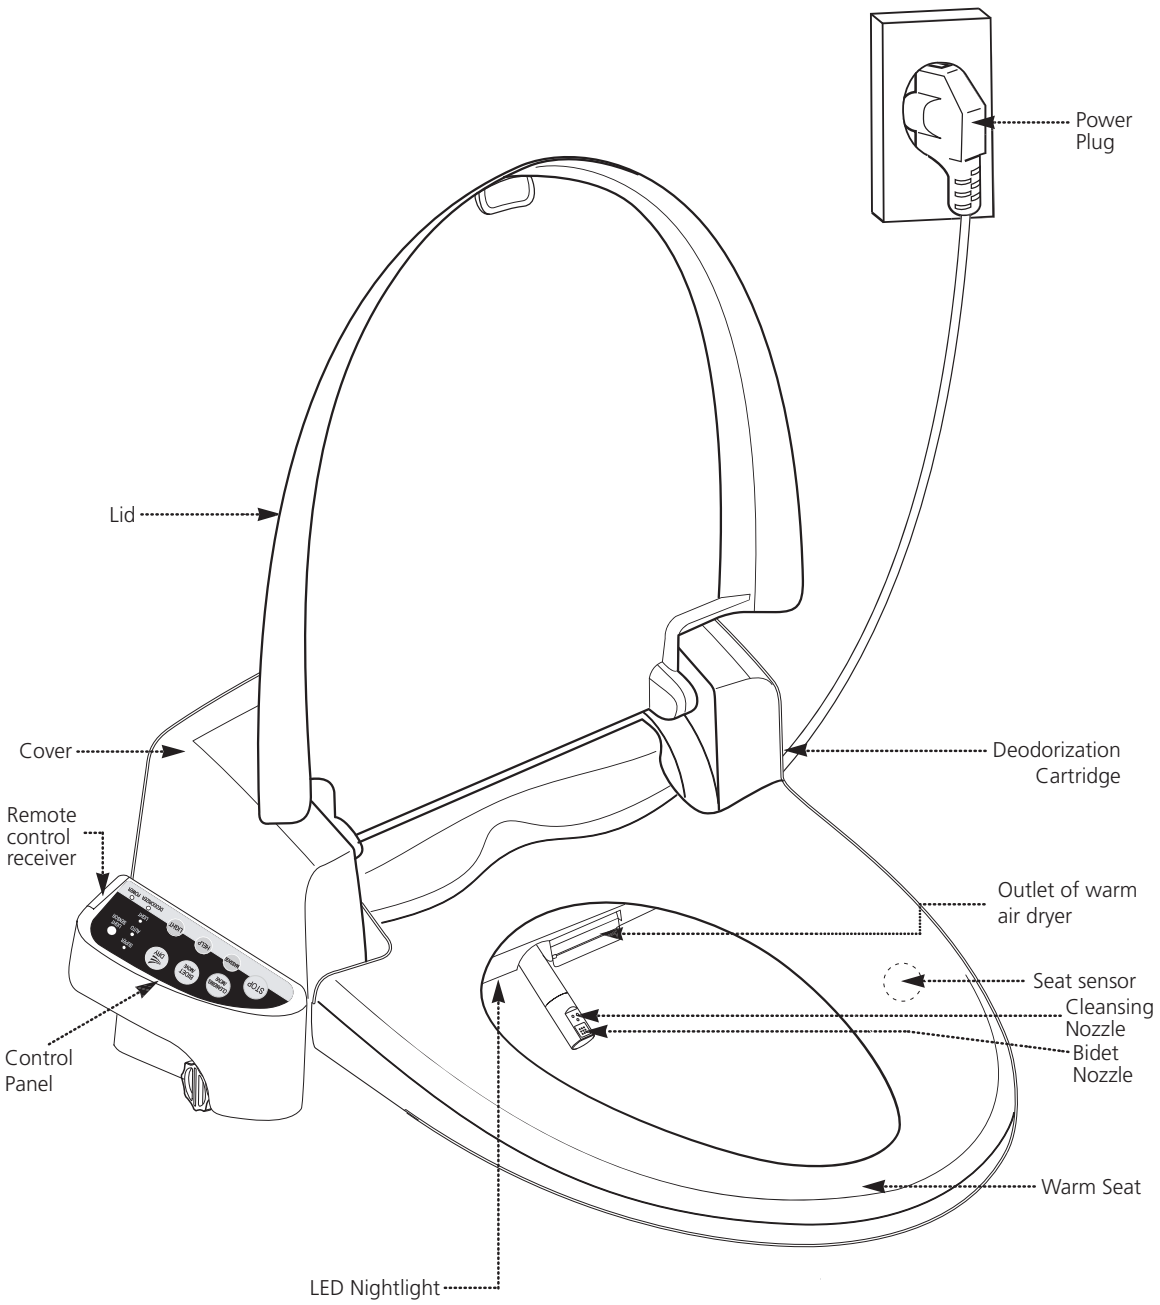

Parts Identification

Accessory Parts

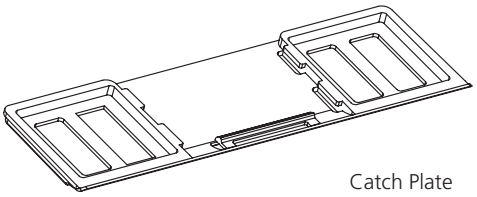

Catch Plate



Brackets

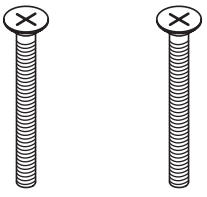

Fixation Bolts

Washers

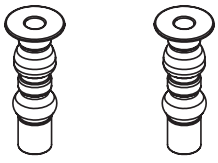

Packing nuts

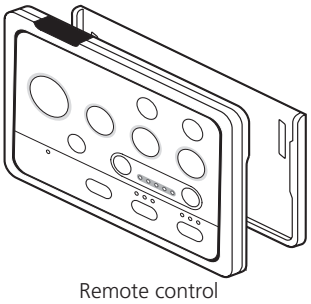

Remote control
& Holder



Batteries



Flexible Hose(for Main Unit)

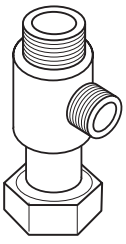

T-valve

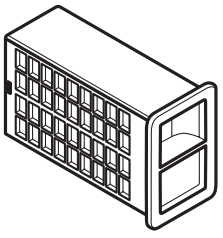

Deodorization Cartridge

Control Panel

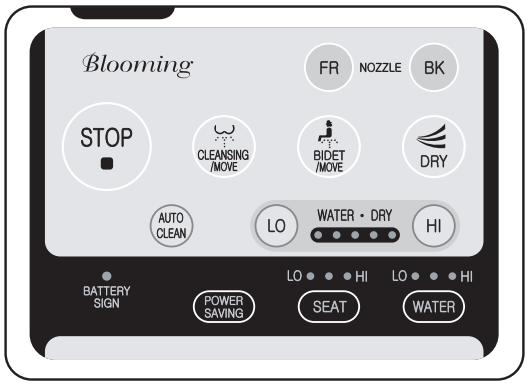

Remote control

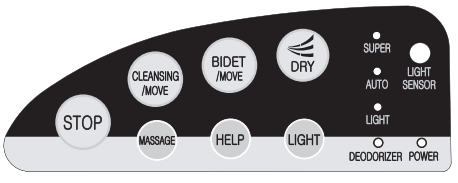

Unit control panel

Basic Instructions

"CLEANSING", "BIDET" and "DRY" button on the unit control panel is supplementary ones which is used in case of remote control breakdown or battery out, then the adjustment of the water pressure and the warm air temperature are not available through the unit panel control.
You need to press "CLEANSING" or "BIDET" or "DRY" and related control buttons on the Remote Control to adjust water pressure or the temperature of warm air.

① Sit on the seat

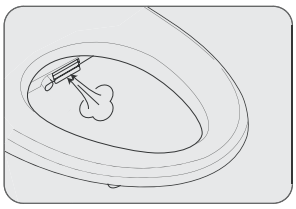

- When seated, "DEODORIZER" indication lights up.
- Deodorization automatically starts.

② Press the "CLEANSING" or "BIDET" button

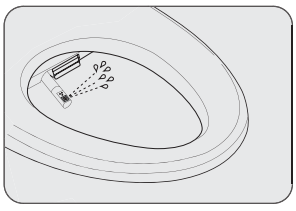

- Operate either the "CLEANSING" or the"BIDET" function.
- Each function operates for 1 minute.
- Move cleansing runs by pressing "CLEANSING" or "BIDET"button while using.
- It beeps if cleansing or bidet cleansing function is over.

③ Press the "DRY" button

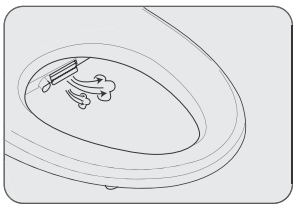

- The "WATER • DRY" indication lights up and warm air dryer starts.
- Dryer function will operate for 3 minutes.
  (Running for 1 minute in auto-clean mode)
- It beeps if dryer function is over.
- Drying operation can be maximized by gently wiping wet area with toilet paper.

④ Press the "STOP" button

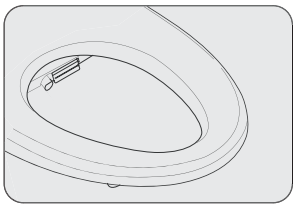

- Stops all operating functions.

- When using the unit, please sit in center.
  (The seat sensor may not be properly activated, if not seated in center. Please refer to 'seat sensor' on 11 page.)
- If the "CLEANSING" or "BIDET" function is operated for a long time, water temperature will drop gradually. To regain warm water, resume operation after 3 minutes.

Functions & Operation

Move (Oscillating Wash)

- Move cleansing runs by pressing "CLEANSING" or "BIDET" button while cleansing or bidet cleansing.
- Nozzle stops by pressing "CLEANSING" or "BIDET" button again.

Water Pressure Adjustment

- The unit remembers the last water pressure settings.
- Water pressure can be adjusted by pressing the "HI" or "LO" button.(When controlling with remote control)
  (Just 3rd level is available and cannot control the water pressure if using button on the unit control panel)

Nozzle Postion Adjustment

- Press the "FR" or "BK" button to adjust the nozzle position during "CLEANSING" or "BIDET" function.
- It returns to the first middle position when finishing and moving away the seat.

Water Temperature Adjustment

- Press the "WATER" button to adjust the water temperature level. Select the desired level.

"LOW" → "MIDDLE" → "HIGH" → "OFF"
"OFF" ← "HIGH" ← "MIDDLE" ← "LOW"

Warm Seat Temperature Adjustment

- Press the "SEAT" button to adjust the seat temperature level. Select the desired level.

"LOW" → "MIDDLE" → "HIGH" → "OFF"
"OFF" ← "HIGH" ← "MIDDLE" ← "LOW"

※ The unit remembers the water and seat temperature settings even if the power is shut off.
No need to readjust the temperature settings after a power failure.

Warm Air Dryer Temperature Adjustment

- During the dryer operation, the "WATER • DRY" LED indicates the temperature level of the warm air dryer.
- The unit remembers last warm air temperature settings.
  Press "HI" or "LO" button to adjust the temperature of the warm air.
  (Just 3rd level is available and cannot control the warm air temperature if using button on the unit control panel.)

Functions & Operation

LED Nightlight

- LED Nightlight activates by pressing "LIGHT" button and LED Nightlight function runs automatically when getting dark. To cancel the LED Nightlight function, press "LIGHT" button again and LED goes OFF.
- When LED Nightlight function runs, Bidet senses automatically toilet light and LED Nightlight goes on. User can use conveniently bidet without toilet light.
- Electric power consumption is little and use the LED Nightlight function without care about the electric charge.

Auto Power Saving

- Locate the LED indication at "AUTO" position by pressing "POWER SAVING" button.
- It maintains 30 ˚C(86 ˚F) for warm water and seat temperature each in the auto power saving mode.
- Auto power saving function is temporarily released, when sitting on the seat.
  Auto power saving function runs again, when moving away from the seat.
- To cancel auto power saving function, press "POWER SAVING" button twice, then LED indication goes OFF.

Super Power Saving

- Locate the LED indication at "SUPER" position by pressing "POWER SAVING" button.
- Bidet senses toilet luminosity for itself and shows excellent power saving efficiency in the super power saving mode.
- Water and seat temperature maintain normal temperature in the super power saving function and power saving mode is temporarily released when toilet lightning goes ON.
- It returns to normal mode from power saving mode even if occupying the seat in dark condition.
- To cancel super power saving function, press "POWER SAVING" button, then LED goes OFF.

Deodorization

- Deodorizing function automatically runs when occupying the seat. Sound of deodorization running appears and "DEODORIZER" LED lights up.
- When moving away from the seat, deodorizing function runs for 1 minute more and stops automatically. (When occupying the seat for over 30 minutes, it runs for 30 minutes and stops)
- For fragrant function, put the aromatic instead of deodorizing filter. Need to purchase from specialty store.

Functions & Operation

Self Nozzle Cleaning

- Before and after each operation, the self nozzle cleaning function runs and sanitizes the nozzle head.

Nozzle Cleaning

- Press the "CLEANSING" and "BIDET" button simultaneously on the unit control panel. The nozzle comes out and stops.
- Clean the nozzle manually with a small brush. Press the "STOP" button and the nozzle returns to its storage position, then self-cleaning function is operated.

Massage

- Press massage button and pulsating function runs while cleansing or bidet function are running. (Not operated on the 1st level of water pressure)
- Massage function stops by pressing "MASSAGE" button again.

Power On/Off

- Press the "STOP" button for more than 4 seconds and then the power indication light goes off. Unit will be power off completely.
- Press any button except "LO" and "HI" buttons, then power goes ON lighting up the "POWER" LED.
- The unit remembers all of the prior settings in spite of an electrical outage so no need to reset functions after power is back.

Help

- Buzzer sounds for 30 seconds to call guardian if pressing "HELP" button.
- Buzzer sound stops by pressing "STOP" button or "HELP" button again during help function is running.

Burn protecting system at the low temperature

- Seat temperature goes down in case the temperature position is "HI" when sitting on the seat for over 30 minutes. (May cause burns at the low temperature in case sitting on the seat for a long time.)
- It returns to set point when resetting or moving away from the seat.

Functions & Operation

Auto Cleansing

- Move cleansing and warm air dryer run for 1 minute each by pressing "AUTO CLEAN" button.
- The 3rd level for water pressure , the 2nd level for warm air dryer temperature and the 3rd level of nozzle position are automatically set-up. (Water pressure, warm air dryer temperature and nozzle position can be adjusted according to user preference)
- When using auto clean function, Sensor forces to set the water & seat temperature to "Medium", in case the temperature were set up on the "High" position.
  (Can adjust the water & seat temperature according to user preference)
- Buzzer sounds if the auto clean function finishes.
- Can return to previous auto-clean function that was set up when canceling auto-clean function or pressing stop button.
- Useful function for the old, the weak, and children.

Seat Sensor

- Seat sensor is installed in the seat.(Refer to page 5)
- Seat sensor is activating when skin contacts the seat.

  Therefore, Seat sensors may not be activated if cloth cover or other materials are placed on the seat.

Changing batteries of remote control

- If the LED of "BATTERY SIGN" goes on and off, there will be trouble pressing buttons and change the battery to new ones. Battery can be discharged fast according to the installation environment and may not use the remote control before realizing the LED notice of "BATTERY SIGN"

1. Separate the remote control from the remote control holder.
2. Open the battery cover and change to new batteries. (Battery life time : about 1 year)
3. Close the battery cover and insert the remote control into the remote control holder.

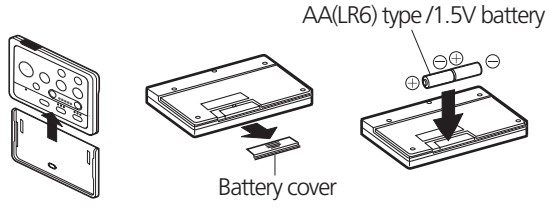

⚠ Caution

- Battery type to be inserted is AA(LR6) /1.5V. Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instruction.
- Insert the batteries according to the (+) , (-) indications marked on the remote control.
- Do not use the used battery and new one together.

Installation

Caution before installation! ⚠

- **Check whether the size and shape of the toilet seat are suitable for installation.**
- **Check all the accessory parts are in place.**
- **Do not connect the power until installation is finalized.**
- **Ground connection should be done by authorized service person only.**

1 Remove the existing toilet seat.

- Remove the existing toilet seat and lid by unfastening fixation nuts under neath.
- Keep the detached seat, lid and nuts for later use.

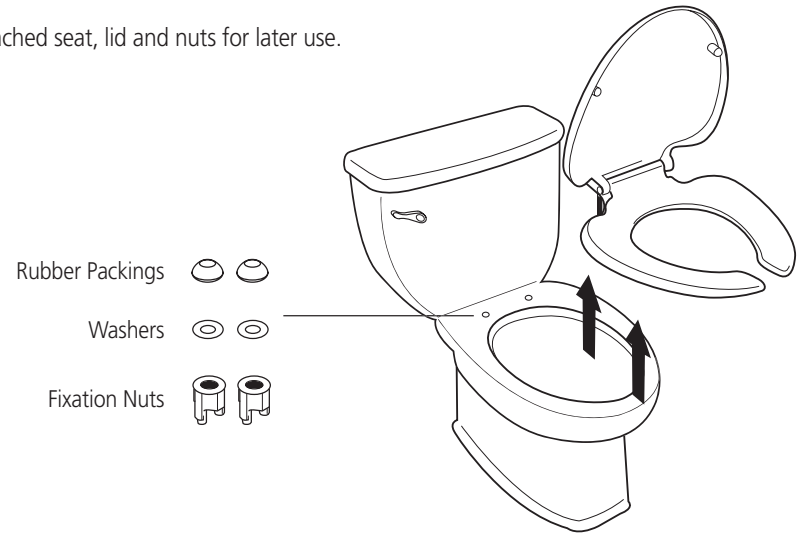

2 Drain toilet water tank completely after turning off the water supply by turning the shut off valve clockwise.

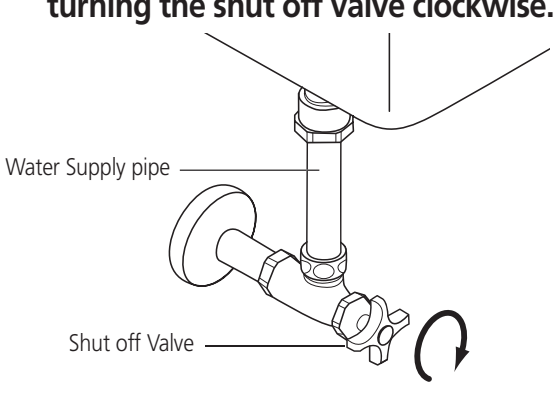

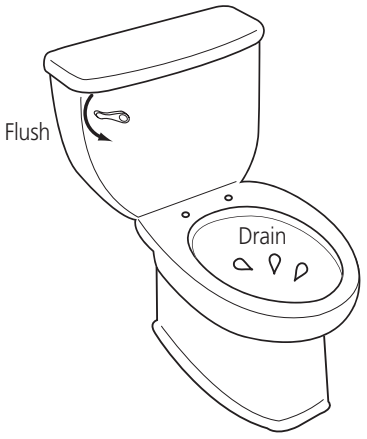

Installation - Further Steps

❸ Detach the water supply hose on the part of the shut off valve, then install the T-valve.

- In case of a rigid pipe, T-valve cannot be installed. Needs to purchase and install the separate flexible hose(for water tank).

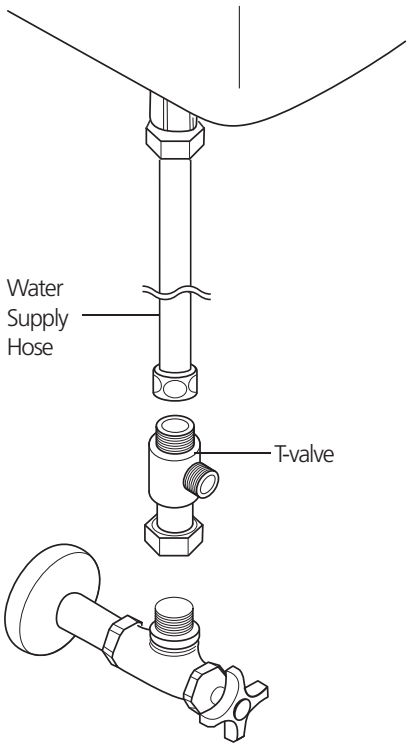

❹ Insert the packing nuts into the fixing holes on the toilet seat.

- If there is trouble inserting packing nuts due to small fixing hole (below 14mm or 0.55") on the toilet seat, you need to use other packing nuts and washers.
  (Only one pair of standard packing nuts are included in the package as an accessory part)

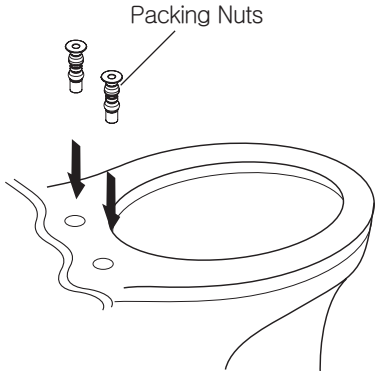

❺ Put the washers on the packing nuts.

❻ Fasten the catch plate with fixation bolts after setting in place the brackets on the catch plate.

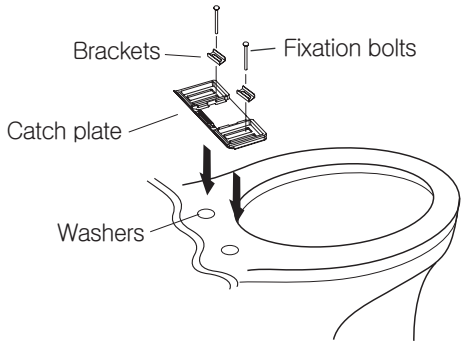

Installation

7 **Slide the unit to the catch plate installed according to grooves underneath the unit.**

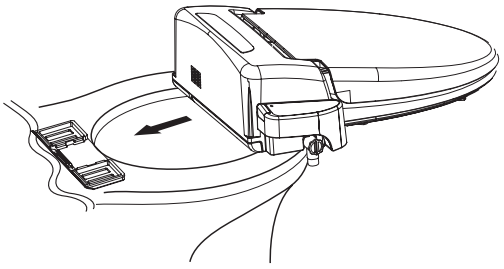

8 **Connect the flexible hose to the T-valve and the unit.**

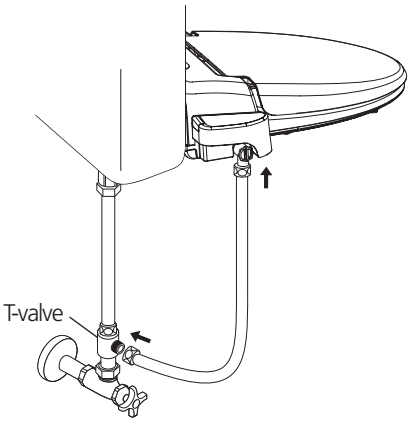

9 **Attach the remote control on the wall with double stick tape**

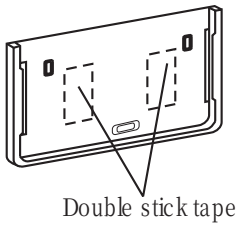

10 **Insert batteries as illustration below and put the remote control into the remote control holder.**

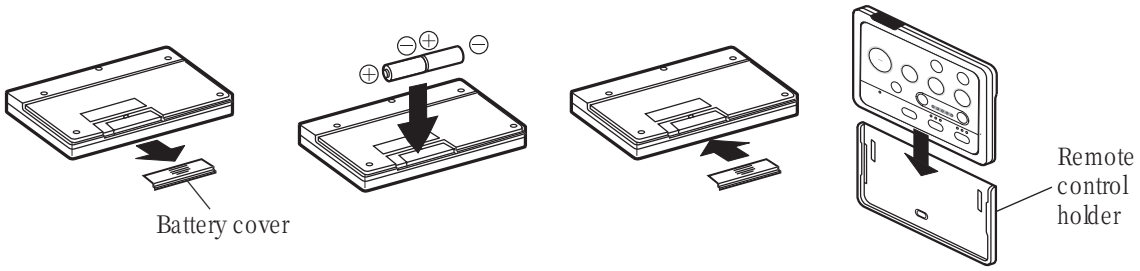

11 **Insert the deodorization cartridge into the unit.**

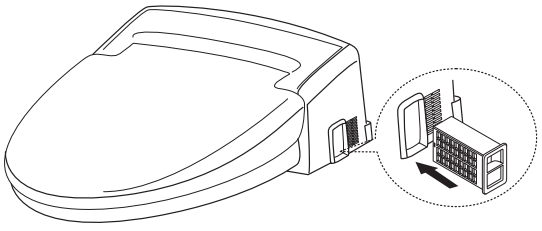

Installation - Further Steps

2nd Installation about angle valve

- take the water-line for connection between the bidet-system and the water-in
- open the water wheel and check immediately if it's leaking

3rd Installation about water connection behind wall

- take the three boards from the that you get look directly to the showing construction
- close the water while using the wheel
- use the T-connection unit (no. 6) with the special fitting (no.7)* inch.a further water-line (no.12)*
- the end you have to connect to further line (no.13)* while using a screw (no.8)*
- about the water-line (no.13) make the connection to the bidet-system
- open the water wheel and check immediately if it's leaking
- to close the wall you have to make a whole into the three boards as follows:

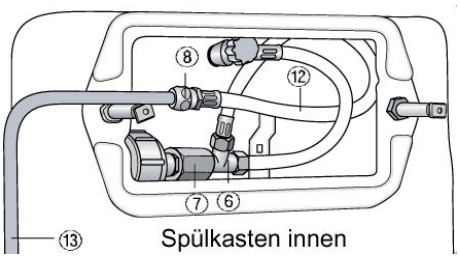

Spülkasten innen

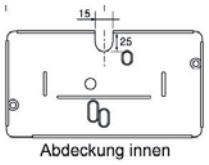

Abdeckung innen

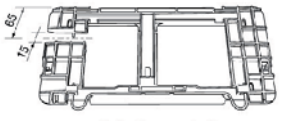

Befestigungsplatte

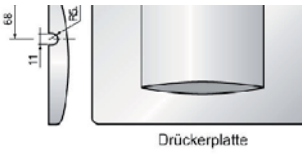

Drückerplatte

- close the wall in the reverse direction as in the beginning

*the special fitting (no.7) is not necessary with using the T-connection unit

Not included into the appurtenances are:

- water-line (no.13) - please ask your plumber
- screw (no.8) - please ask your plumber

Detachment

Follow the below instructions if in need to detach the unit for to move.

1. **Disconnect the power plug.**
2. **Close the water supply by turning the shut off valve clockwise and drain the toilet water tank completely.**
3. **Disconnect the flexible hose from the unit and unfix the unit from the toilet. And unfix the catch plate from the toilet.**

To detach the unit, pull forward at a state of lifting up the front part of the unit as shown on the illustration.

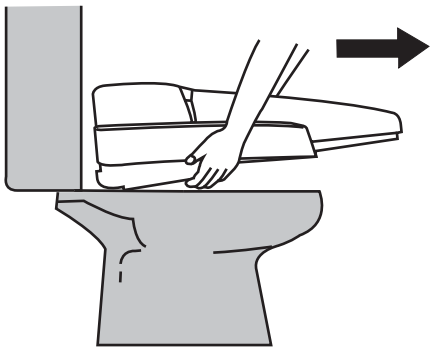

4. **Unfasten the drain plug underneath the unit and drain the water completely in the water tank.**

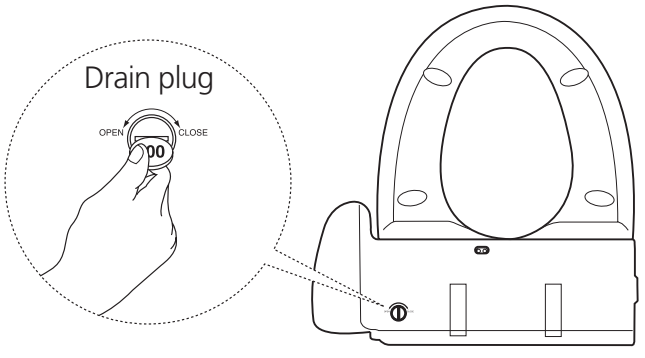

5. **Disconnect the flexible hose and T-valve.**
6. **Connect the water-supply hose to the shut off valve.**
7. **Open the shut off valve by turning counterclockwise and check any leakages on the connections.**
8. **Reinstall the original seat and lid to the toilet.**

Maintenance

Cleaning the Water Strainer

1. Close the water supply by turning the shut off valve clockwise and drain the toilet water tank completely.
2. Remove the water strainer by turning counterclockwise.
3. After cleaning the strainer, reinsert it by turning clockwise.
4. Open the shut off valve.

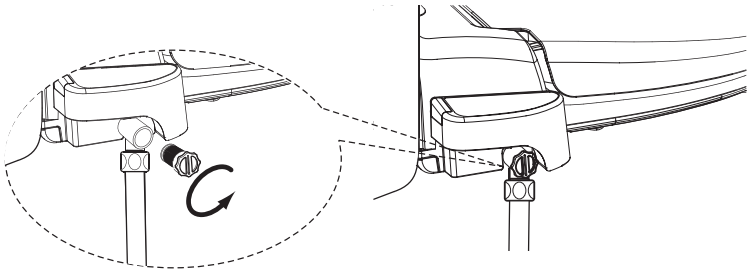

Cleaning the Nozzle

1. Press the "CLEANSING" and "BIDET" button simultaneously.
   The nozzle comes out and stops.
2. Clean the nozzle manually with a small brush. To return the nozzle to its storage position, press the "STOP" button. Then nozzle self cleaning function is automatically activated.

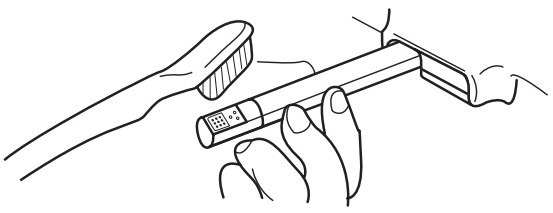

Maintenance

External Cleaning

- The external case of the unit is made of the plastic which may be damaged by scrubbers, chemicals, etc. Do not use any chemicals.
- Clean the unit with a tightly wrung wet soft cloth. Do not spray water the unit.
- Disconnect the powr plug when cleaning. Please be careful not to splash the water to the plug or socket.
- Touching the power socket with wet hands can cause an electric shock.

Water Tank Drainage

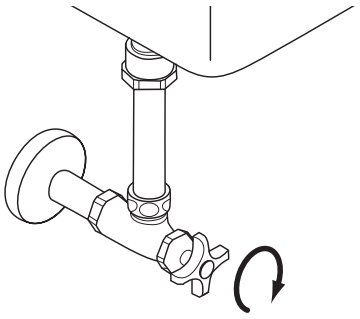

1. Disconnect the power plug first.
2. Close the shut off valve by turning clockwise.
3. After placing a basin (4ℓ) under the drain hose, unfasten the drain plug and drain the water tank completely.

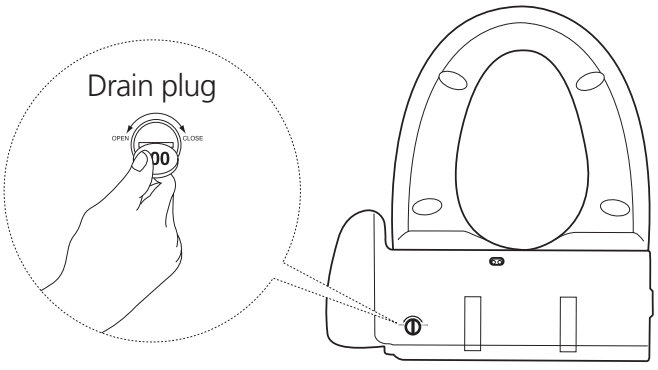

Freeze Prevention during Winter

1. Connect the power plug and check if the unit power is on.
2. Do not turn off the "WATER" level and adjust water temperature to "LO" or higher.
3. If not in use for a long time, drain the water tank.

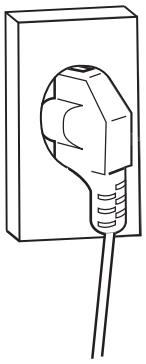

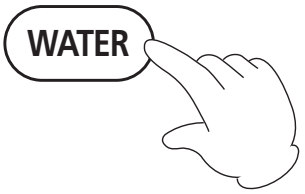

Troubleshooting

Check the following details before calling for service.

Problem Description	Possible Causes
Unit does not operate at all	• The power is OFF. ☞Press any button to check except "HI","LO" buttons of the remote control. • The power plug is not connected. • There is a power failure.
Cleansing, Bidet, Dry, Autoclean do not operate	• A seat cover or something is laid on the seat. ☞ Have you checked If a seat cover or something had been on the surface of seat? The unit begins to operate only when a user's skin touch on the seat sensor.
Remote control does not operate at all	• Batteries in the remote control have been exhausted . • The toilet lighting is the three wave lamp. ☞ Remote control may not run if the toilet lighting is the three wave lamp. Please adjust the position of the remote control or recommend changing the toilet lighting to normal lamp in case the remote control does not run in spite of position adjustment.
No water spray	• The shut off valve is closed. • There is water supply outage.
Low water pressure	• The water pressure level is set to "LO". • The water strainer is clogged.
Water temperature is low	• The water temperature level is turned off or set to "LO". • Warm water can be used for about 40 seconds at the "MID" setting. It will take about 3 minute to regain selected temperature.
Seat is not warm	• The warm seat temperature level is turned off or set to "LO".
Dryer air is not warm	• The warm air dryer temperature level is turned off or set to "LO".

Product Specifications

Item			NB-R770E
Power Supply			220-240V~, 50/60Hz
Max. Power Consumption			660-785W
Length of Power Cord			1.4m
Water Supply Connection			Direct connection to the water supply
Water Supply Pressure			98 - 735kPa
Cleansing	Water Flow Rate	Cleansing	1.1 ℓ/min
		Bidet	1.3 ℓ/min
	Water Pressure Adjustment		5 Levels
	Temp. Adjustment		Normal Temp., 34°C, 37°C, 40°C
	Heater Capacity		600-714W
	Safety Device		Thermal Fuse, Thermostat, Water Level Sensor
Warm Seat	Temp. Adjustment		Normal Temp., 35°C, 38°C, 40°C
	Heater Capacity		55-65W
	Safety Device		Thermostat
Dry	Temp. Adjustment		Normal Temp. ~ 50°C (5 Levels)
	Heater Capacity		150-178W
	Safety Device		Thermal Fuse, Bi-metal
Deodorization			Catalytic Deodorization
Water Supply Temp.			3˚C ~ 35˚C
Temp. of circumstance for use			3˚C ~ 40˚C
Product size			(W)470mm x (L)530mm x (H)165mm
Product weight			4.6kgs

Warranty

Product Warranty Card

- We warrant our products to be free from manufacturing defects under normal use and service for a period of two(2) year after purchase. This warranty is extended only to the original purchaser.
- For product defect, please contact your vendor or our service center.

Product Name	Blooming Bidet	Model Name	
Date of Purchase		Serial Number	
Name of Purchase		Duration of Warranty	two year after purchase

< Free After-sales Service Regulations >

- During the duration of the warranty period, if product defect occurs during normal application as stated in the Instruction Manual, Cautionary Notes, Direction Labels, etc., the product is applicable for after-sales service free of charge.
- Even during the warranty period, after-sales service is not applicable free of charge in case of the following conditions :

(1) Damage occurring from customer negligence or fault, and defect or damage occurring from wrongful repair or alteration.
(2) Defect or damage occurring from fire, gas, flood, earthquake, lightning, other natural calamities, pollution, or abnormal electrical power.
(3) Defect or damage occurring from outside of normal household usage.(long term public usage, used inside a vehicle, installed inside a vessel, etc.)
(4) Defect or damage occurring from transportation of mistreatment after purchase.
(5) Defect or damage occurring during removal after installation.
(6) Wearing of consuming parts.(Packing, Filters, etc.)
(7) Product reinstallation by customer request.
(8) Read the Instruction Manual carefully before requesting for an after-sales services since charges will be invoiced for faulty service call visits.

MZ-Handelsagentur

Wichtige Schutzvorrichtungen

Bitte lesen Sie alle Instruktionen vor Inbetriebnahme

GEFAHR Um die Gefahr von Stromschlägen zu verringern

- Nicht benutzen, während sie ein Bad nehmen
- Bitte lagern sie das Produkt nirgends, wo es in eine Wanne fallen oder sinken könnte
- Bitte nicht in Wasser oder andere Flüssigkeiten legen
- Greifen Sie nie nach einem Gerät, das im Wasser liegt. Vorher ausstecken!

WARNUNG Um das Risiko von Feuer, Stromschlägen oder Verletzungen zu verringern

- Wenn dieses Gerät von oder in der Nähe von kleinen Kindern und Behinderten benutzt wird, ist strenge Überwachung notwendig
- Benutzen Sie das Gerät nur wie in der Bedienungsanleitung beschrieben Benutzen Sie keine anderen Befestigungsmaterialen, als die vom Hersteller empfohlenen
- Benutzen Sie das Gerät niemals wenn es Dellen aufweist, wenn es nicht richtig funktioniert, es fallengelassen oder sonst beschädigt wurde oder es ins Wasser gefallen ist. Schicken Sie das Gerät in diesem Fall zum Kundendienst zur Reparatur
- Halten Sie das Kabel fern von heißen Oberflächen
- Blockieren Sie niemals die Lüftungsschlitze des Geräts oder legen es auf eine weiche Oberfläche, wie ein Bett oder ein Sofa, wo die Lüftungsschiltze blockiert

  ähnlichem
- Benutzen Sie das Gerät nie, wenn sie schlafen
- Stecken Sie nie irgendetwas in eine der Öffnungen des Geräts
- Nie draußen benutzen, oder wenn Sprüh-Produkte oder Sauerstoff verwendet werden
- Schließen Sie das Produkt nur an korrekt geerdete Steckdosen an
- Jeglicher Kundendienst sollte von einem autorisierten Dienstleister durchgeführt werden

  Ändern, reparieren oder bauen Sie das Gerät niemals auseinander
- Giessen oder sprayen Sie niemals Wasser auf das Gerät
- Das Gerät muss geerdet sein
- Berühren Sie die Stecker niemals mit nassen Händen
- Schließen Sie das Gerät korrekt an den Strom an und achten Sie auf die richtige Spannung des Gerätes

Wichtige Schutzvorrichtungen

WARNUNG **Um das Risiko von Feuer, Stromschlägen oder Verletzungen zu verringern**

- Benutzen Sie keine zerstörten oder angebrochenen Stromkabel
- Benutzen Sie keine Dampf-Reiniger
- Halten Sie das Gerät von Feuer und entzündlichen Substanzen fern
- Nicht an industrielle Wasser-Anschlüsse anschließen
- Schließen sie keine elektrischen Geräte an die gleiche Steckdose an
- Lassen sie defekte Stromanschlüsse durch autorisierte Fachpartner ersetzen
- Vorsicht vor leichten Verbrennungen
- Bevor Sie das Gerät von der Toilettenschüssel entfernen, trennen Sie es zuerst vom Strom

VORSICHT **Um Verletzungen bei Personen und Beschädigungen am Gerät zu verringern**

- Stellen Sie keine schweren Objekte oder stehen sie nie auf das Gerät, es könnten Beschädigungen am Gerät oder Verletzungen auftreten
- Benutzen Sie keine Chemikalien um das Gerät zu reinigen. Reinigen Sie das Gerät mit einem feuchten und gut ausgewrungenen Tuch. Bei gröberem Schmutz, benutzen sie ein weiches, feuchtes Tuch mit mildem Geschirr-Reiniger und wischen mit einem trockenen Tuch nach
- Das könnte einen Produktdefekt verursachen
- Knallen Sie den Deckel nicht zu, das könnte einen Produktdefekt verursachen
- Das könnte einen Produktdefekt verursachen
- Lehnen Sie sich nicht auf den Deckel
- Wenn Sie das Gerät eine längere Zeit nicht benutzen, trennen Sie es vom Strom und leeren Sie den Tank
- Das Tankwasser könnte verschmutzt werden und Hautprobleme verursachen
- Ziehen und drehen Sie nicht am Verbindungsschlauch
  Es könnte die Wasserzufuhr unterbrechen oder ein Leck entstehen lassen
- Den Warmluft-Ausgang nicht bedecken oder Teile hineinstecken, es könnte einen Stromschlag verursachen
- Benutzen Sie das Gerät nicht bei Fehlfunktion
  Ziehen Sie den Stecker raus und kontaktieren Sie den Kundendienst
  Bei Benützung mit Fehlfunktion besteht Brand- und Stromschlag-Gefahr

BEWAHREN SIE DIESE ANWEISUNG AUF

Wichtige Schutzvorrichtungen

Markierung

Diese Markierung auf dem Produkt oder ihrer Literatur zeigt an, dass es nach Ende der Lebensdauer nicht zusammen mit normalem Hausmüll entsorgt werden darf. Um Umweltverschmutzung und Gesundheitsschädigungen druch unkontrollierte Müllbeseitigung vorzubeugen, trennen Sie dieses Gerät bitte von anderem Müll und recyceln sie es um die umweltverträgliche Wiederverwendung der Materialien zu fördern.

Privatpersonen sollten entweder den damaligen Händler oder Kommune verständigen um Informationen darüber zu erhalten, wie sie dieses Gerät am besten entsorgen können.
Gewerbliche Benutzer sollten Ihren Lieferanten kontaktieren und die Bedingungen des Kaufvertrages überprüfen.
Dieses Produkt darf nicht mit anderem gewerblichen Abfall vermischt werden.

- Zugang zum Wasserschutz : IPX4 (nur die Sitzheizung)

Auflistung der Bestandteile

Blooming Bidet NB-R770E

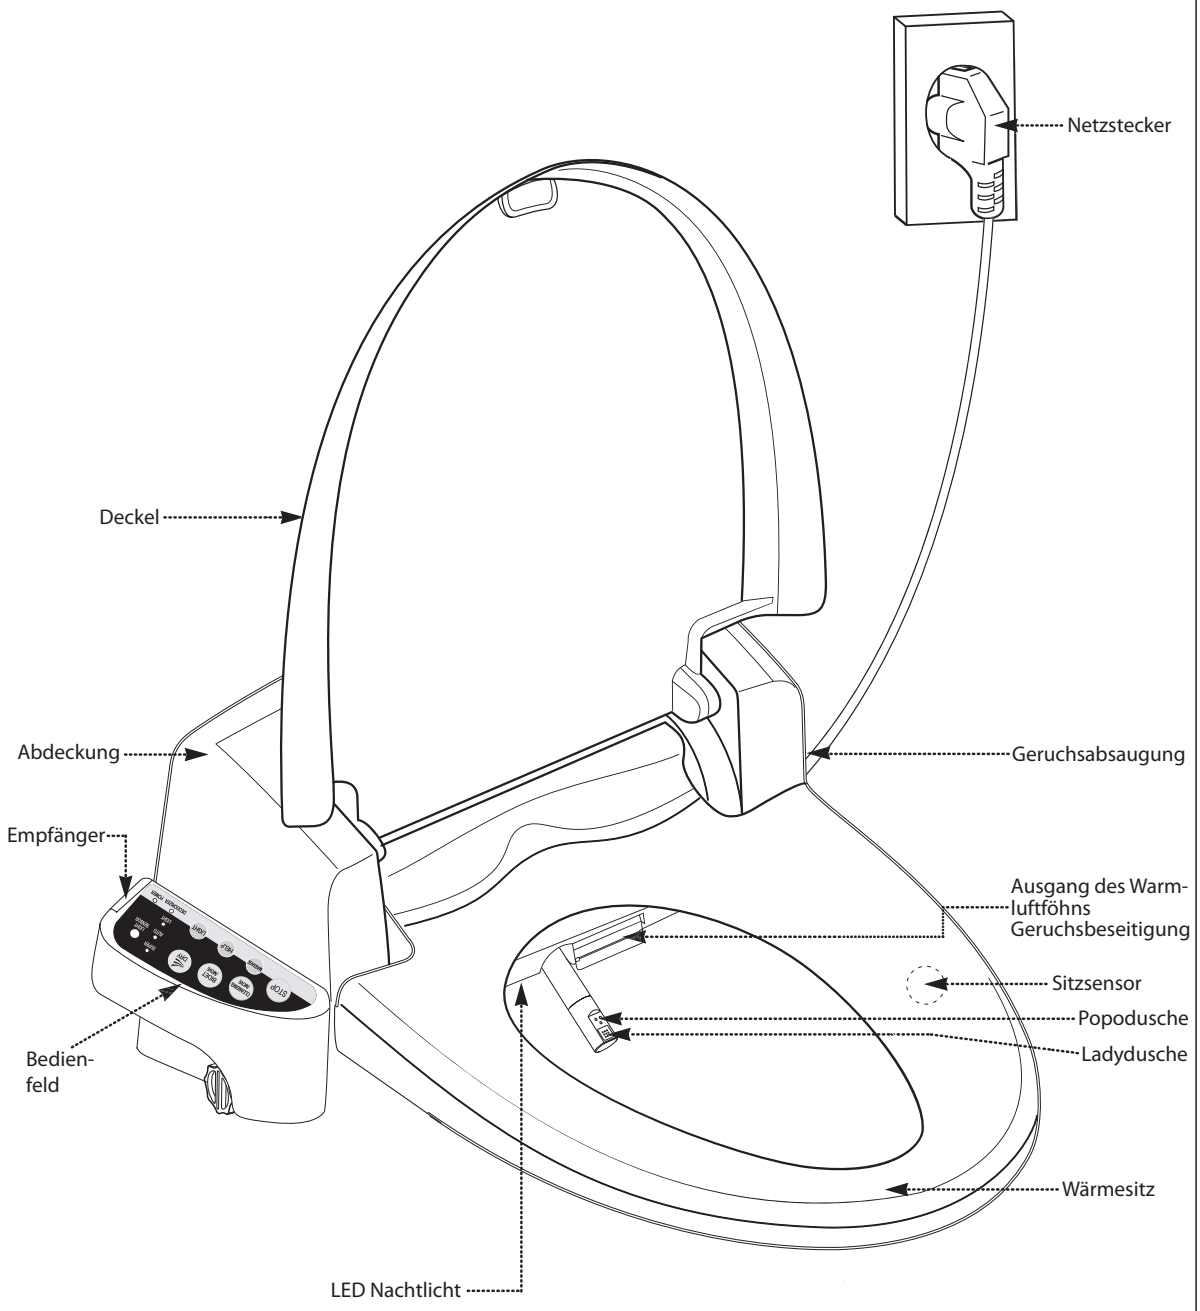

Auflistung der Bestandteile

Das Zubehör

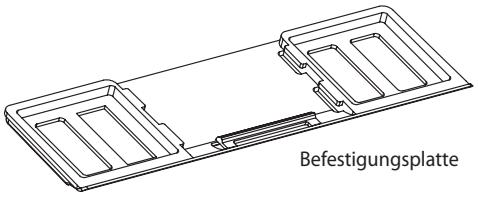
Befestigungsplatte


Haltewinkel

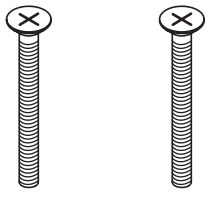
Fixier-Schrauben

Beilagscheiben

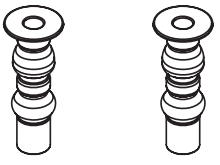
Dichtungsmutter

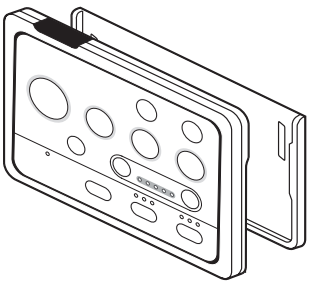
Fernbedienung mit Halter


Batterien


Panzerchlauch

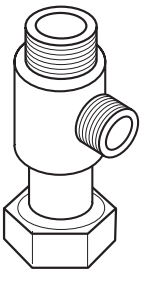
T-Stück

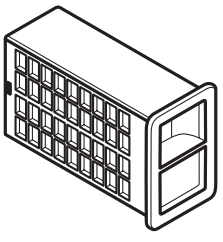
Aktivkohlefilter

Bedienfeld

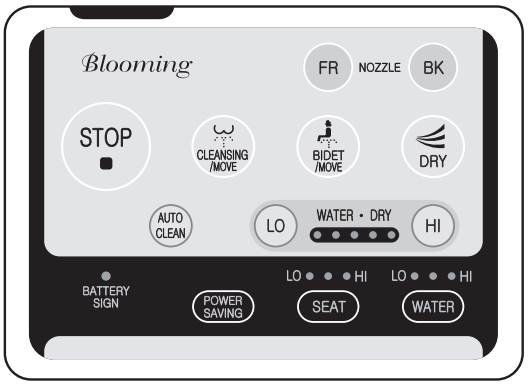

Fernbedienung

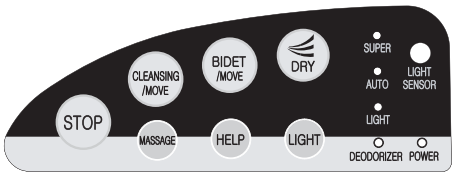

Bedienfeld

Kurzanleitung

Die Tasten "CLEANSING","BIDET" und "DRY" direkt am Dusch-WC starten die jeweiligen Funktionen Während des Duschvorgangs kann allerdings der Wasserdruck nicht verstellt werden. Die Temperatur des Fönes kann über die Taste "DRY" ebenfalls nicht verändert werden. Um den Wasserdruck und die Temperatur des Fönes zu verändern, drücken sie einfach auf der Fernbedienung nochmals die laufende Funktion und anschliessend die TASTEN für den Druck oder der Temparatur.

1 Schalten Sie das Gerät ein, indem Sie auf eine beliebige Taste drücken

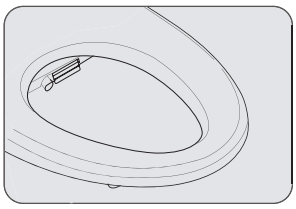

- Nachdem Sie sich hingesetzt haben, leuchtet die Anzeige oberhalb der „DEODORIZER“ Taste auf
  Das Dusch-WC ist nun betriebsbereit.
- Die Geruchsabsaugung startet automatisch

2 Drücken Sie die „CLEANSING“ oder „BIDET“ Taste

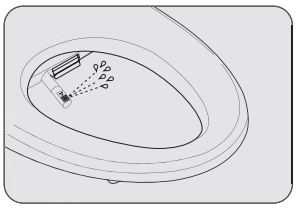

- Führt entweder die „CLEANSING“ oder „BIDET“ Funktion aus
- Jede Funktion läuft eine Minute
- Bei wiederholtem Drücken der „CLEANSING“ oder „BIDET“ Taste schalten sie die Move-Funktion dazu. Die Düse bewegt sich automatisch hin-und-her

3 Drücken Sie die „DRY“ Taste

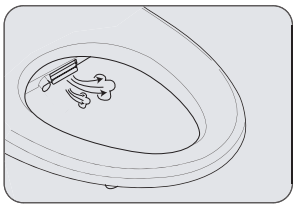

- Das „„WATER･DRY““ Licht leuchtet und der Warmlufföhn startet
- Die Warmluftföhnfunktion läuft für 3 Minuten
  (1 Minute im automatischen Modus)
- Der Trockenvorgang kann mit Hilfe von sanftem Abreiben mit Toiletten papier maximiert werden.

4 Drücken Sie die „STOP“ Taste

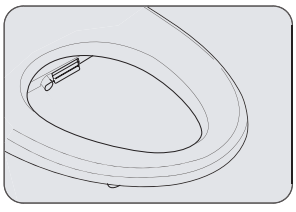

- Stoppt alle Funktionen

Sitzen Sie in der Mitte, wenn Sie das Gerät benutzen
(Der Sitzsensor könnte nicht richtig funktionieren, wenn man nicht in der Mitte sitzt, siehe dafür „Sitzsensor“ auf Seite 32)
Wenn die „CLEANSING“ oder „BIDET“ Funktion längere Zeit aktiv ist, fällt die Wassertemperatur nach und nach. Um wieder warmes Wasser zu erhalten, setzen Sie die Funktion nach 3 Minuten fort.

Funktionen & Anwendungen

Move-Funktion(Oszillierende Reinigung)

- Die Move-Funktion erfolgt beim Drücken der„CLEANSING“ oder„BIDET“ Taste während eine der 2 Funktionen bereits läuft
- Die Düse stoppt, wenn„CLEANSING“ oder„BIDET“ noch einmal gedrückt werden

Einstellung des Wasserdrucks

- Wenn man sich hinsetzt, wird der Wasserdruck-Level angezeigt. Das Gerät speichert die letzte Wasserdruck-Einstellung
- Der Wasserdruck kann durch drücken von„HI“ oder„LO“ verändert werden.
- Wenn niemand auf dem Gerät sitzt, ist die Wasserdruck-Anzeige inaktiv

Einstellung der Düsenposition

- Drücken Sie„FR“ oder„BK“ um die Düsenposition während der Duschfunktion zu ändern
- Die Düse kehrt zu ihrer Mittelposition zurück, wenn der Vorgang beendet ist und man sich vom Sitz entfernt

Einstellung der Wassertemperatur

- Drücken Sie den„WATER“ Taste um die Wassertemperatur zu ändern
  Wählen Sie die gewünschte Temperatur

"LOW" → "MIDDLE" → "HIGH" → "OFF"
"OFF" ← "HIGH" ← "MIDDLE" ← "LOW"

Einstellung der Sitztemperatur

- Drücken Sie die „SEAT“ Taste um die Sitztemperatur zu ändern
  Wählen Sie die gewünschte Temperatur

"LOW" → "MIDDLE" → "HIGH" → "OFF"
"OFF" ← "HIGH" ← "MIDDLE" ← "LOW"

- Das Gerät speichert die Temperatur vom Wasser und der Sitzheizung, auch wenn es ausgeschalten ist. Es ist nicht notwendig, nach einem Stromausfall die Einstellungen neu vorzunehmen

Funktionen & Anwendungen

Einstellung der Warmluft-Temperatur

- Während des Warmluftföhns, zeigt die „WATER·DRY“ LED das Temperatur-Level an
- Das Gerät speichert die letzte Temperatur-Einstellung des Warmluft-Föhns
- Drücken Sie „HI“ oder „LO“ um die Temperatur zu ändern

Nachtlicht LED

- Aktivieren Sie das Nachtlicht durch drücken der „LIGHT“ Taste. Das Nachtlicht geht automatisch an, wenn es im Raum dunkler wird. Um das Nachtlicht auszuschalten, drücken Sie die „LIGHT“ Taste erneut
- Wenn das Nachtlicht an ist, erkennt das Bidet das Toilettenlicht automatisch und das Nachtlicht geht an
- Der Benutzer kann so die Popodusche NB09 ohne Licht in der Toilette benutzen
- Der Stromverbrauch des Nachtlichts ist sehr gering

Automatischer Stromspar-Modus

- Drücken Sie die Taste „POWER SAING“, bis auf der Anzeige „AUTO“ erscheint
- Im Stromspar-Modus wird die Wasser- und Sitztemperatur auf 30℃ festgesetzt
- Wenn man sich auf den sitz setzt, wird die Stromspar-Funktion temporär deaktiviert
- Wenn man sich vom Sitz entfernt, ist die Stromspar-Funktion wieder aktiv
- Um die Stromspar-Funktion ganz zu deaktivieren, drücken Sie zweimal die Taste „POWER SAVING“ , die Anzeige erlischt

Super Stromspar-Modus

- Drücken Sie die Taste „POWER SAVING“, bis auf der Anzeige „SUPER“ erscheint
- Das Bidet erkennt die Toiletten-Helligkeit selbstständig und bietet so exzellente Stromersparnis im Super Stromspar-Modus
- Im Super Stromspar-Modus werden normale Temperaturen für Wasser und Sitz festgesetzt. Der Super Stromspar-Modus wird temporär deaktiviert, wenn das Toilettenlicht angeht
- Das Gerät geht in den Normal-Modus wenn der Sitz im Dunklen besetzt ist
- Um die Super Stromspar-Funktion ganz auszuschalten, drücken Sie die „POWER SAVING“, die Anzeige erlischt

Geruchsbeseitigung

- Die Geruchsbeseitung läuft automatisch, wenn der Sitz besetzt ist. Die Funktions-Melodie ertönt
- Wenn man sich vom Sitz entfernt, läuft die Geruchsbeseitigung noch 1 Minute (Wenn der Sitz mehr als 30 Minuten besetzt ist, läuft die Funktion 30 Minuten)
- Für wohlriechende Düfte, legen Sie einen aromatischen Filter ein. Diesen erhalten Sie bei Ihrem Fachpartner

Funktionen & Anwendungen

Selbstreinigung der Düsen

- Vor und nach jeder Benutzung wird die Selbstreinigung automatisch gestartet

Düsenreinigung

- Drücken Sie die Tasten „CLEANSING“ und „BIDET“ gleichzeitig. Die Düsen fahren heraus
- Reinigen Sie die Düsen manuell mit einer kleinen Bürste. Drücken Sie die Taste „STOP“ und die Düsen verschwinden wieder in ihre geschützte Position, anschließend wird die Selbstreinigung durchgeführt

Massage

- Drücken Sie die „MASSAGE“ Taste und der pulsierende Wasserstrahl läuft während die Duschfunktion aktiv ist (Funktioniert nicht, wenn der Wasserdruck im 1. Level ist)
- Drücken Sie die Taste „MASSAGE“ erneut um die Funktion zu stoppen

Ein-/Ausschalten

- Drücken Sie die „STOP“ Taste für mehr als 4 Sekunden, die Anzeige erlischt
  Das Gerät wird komplett ausgeschaltet
- Drücken Sie eine beliebige Taste um das Gerät wieder einzuschalten
- Das Gerät speichert alle vorherigen Einstellungen auch bei einem Stromausfall. Es ist demnach nicht notwendig, die Einstellungen erneut vorzunehmen

HILFERUF

- nach drücken der Taste "HELP" ertönt für 30 Sekunden ein lautes Klingeln um Hilfe zu alarmieren
- dieses Klingeln kann durch drücken der "STOP" oder "HELP" Taste sofort beendet werden

Verbrennungsschutzsystem bei niedriger Temperatur

- Die Sitztemperatur sinkt wenn die Temperatur auf „HI“ steht und man über 30 Minuten auf dem Sitz sitzt. (Bei längerem Sitzen können leichte Verbrennungen auftreten)
- Wenn man sich vom Sitz entfernt kehrt die Temperatur zum Sollwert zurück

Funktionen & Anwendungen

Automatische Reinigung

- Die bewegende Reinigung und der Warmluftföhn laufen für je 1 Minute, wenn die Taste „AUTO CLEAN“ gedrückt wird
- Das 3. Level für Wasserdruck, das 2. Level für Warmluft und das 3. Level für die Düsenposition werden automatisch eingestellt. (Wasserdruck, Warmluft und Düsenposition können individuell eingestellt werden)
- Beim Benutzen der „AUTO CLEAN“ Funktion, erzwingt der Sensor die Einstellung der Temperaturen für Wasser und Sitz auf „Medium“, wenn die Temperatur auf „HI“ festgesetzt wurden

Sitzsensor

- Der Sitzsensor ist im Sitz installiert (Siehe Seite 26)
- Der Sitzsensor wird aktiviert, wenn Hautkontakt besteht
  Folglich, bleibt der Sensor inaktiv, wenn ihn Stoff bedeckt oder andere Materialien auf den Sitz gelegt werden

Batteriewechsel -Fernbedienung

- Wenn die Anzeige „Battery Sign“ blickt, wird es schwierig sein, die Tasten zu drücken, wechseln Sie deshalb die Batterien

1. Entfernen Sie die Fernbedienung von der Halterung
2. Öffnen Sie das Batteriefach und wechseln die Batterien (Lebensdauer: etwa 1 Jahr)
3. Schließen Sie das Batteriefach und befestigen Sie die Fernbedienung wieder an der Wandhalterung

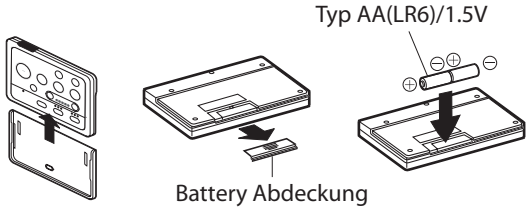

⚠ Caution

- Es werden Batterien vom Typ AA(LR6) 1.5V benötigt. Das Ersetzen der Batterien durch einen falschen Typ kann zur Explosion führen
- Legen Sie die Batterien anhand der +/- Kennzeichnungen in die Fernbedienung ein.
- Benutzen Sie keine gebrauchten und neuen Batterien zusammen

Installation / Montage

Montage

- Vergewissern sie sich vor der Installation, dass Größe und Form des Sitzes korrekt sind
- Vergewissern sie sich, dass kein Zubehör fehlt
- Stecken Sie den Netzstecker erst ein, wenn die Installation abgeschlossen ist
- Die Erdung sollte durch autorisiertes Personal durchgeführt werden

1 Entfernen des ursprünglichen Toiletten-Sitzes

- Entfernen sie den ursprünglichen Toiletten-Sitz, in dem sie die Fixier-Muttern unterhalb abschrauben
- Behalten Sie den abmontierten Sitz und die Muttern für späteren Gebrauch

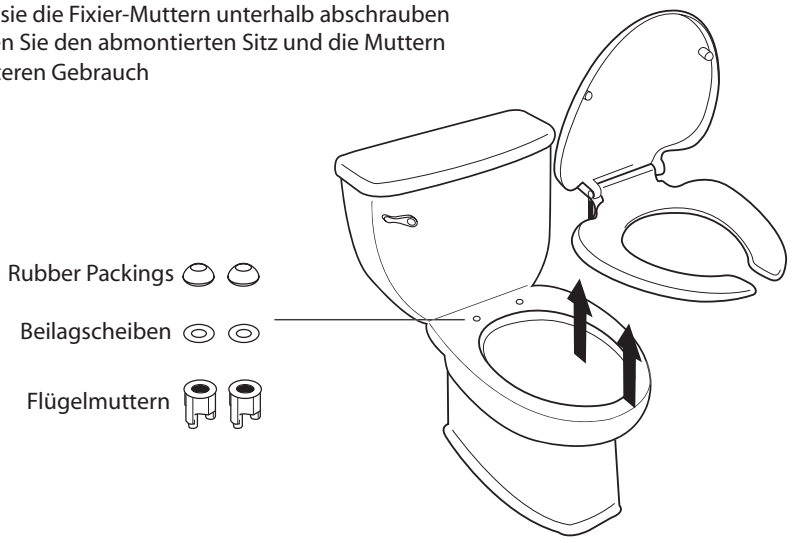

2 Leeren Sie den Wassertank nachdem Abdrehen des Wasserzugangs

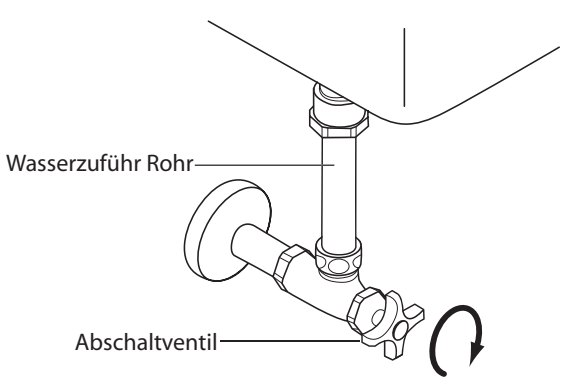

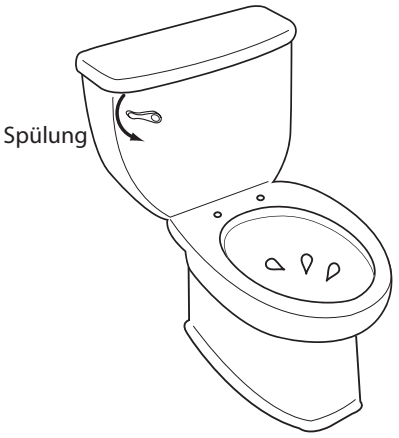

Installation / Montage

❸ Entfernen Sie den Wasserschlauch vom Abschlussventil und befestigen sie das T-Stück

• Im Falle eines unbiegsamen Rohrs können T-Stücke nicht installiert werden. Hierfür muss ein separater flexibler Schlauch gekauft werden (oder Wassertank)

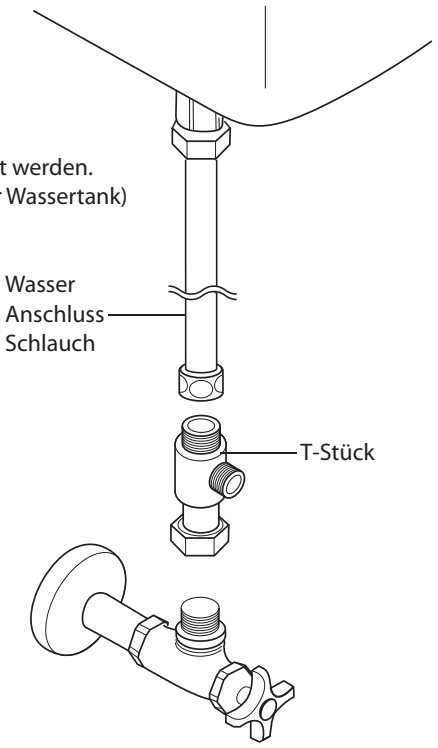

❹ Legen Sie die Dichtungs-Muttern in die Fixierlöcher des Toilettensitzes

• Falls es wegen der Lochgröße Probleme geben sollte, die Dichtungs-Muttern einzuschrauben (unter 14mm oder 0.55“), müssen Sie andere Muttern und Dichtungsringe verwenden (Nur ein paar an Standard-Muttern ist diesem Paket als Zubehör beigelegt)

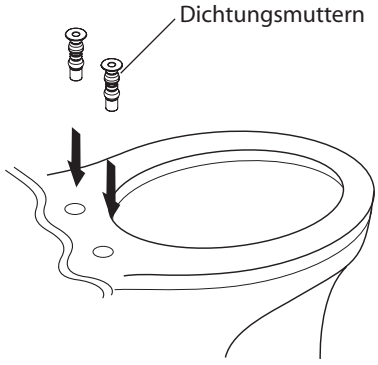

❺ Legen Sie die Dichtungsringe auf die Dichtungs-Muttern

❻ Fixieren Sie die Befestigungsplatte mit den Fixier-Schrauben, nachdem Sie die Haltewinkel darauf befestigt haben

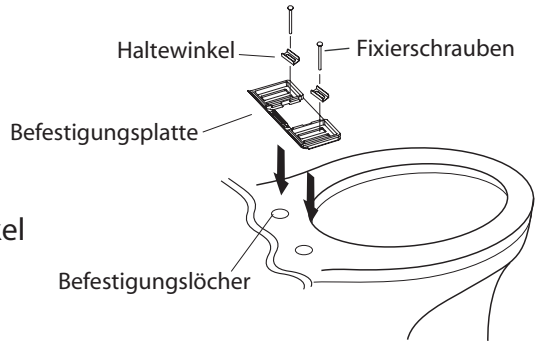

Installation / Montage

7 Schieben Sie die Blooming NB-R770E auf die montierte Befestigungs-Platte entsprechend den Fugen unterhalb des Geräts

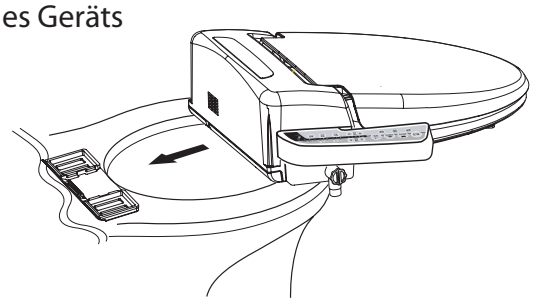

8 Schließen sie den Panzerschlauch an das T-Stück und das Dusch-WC an

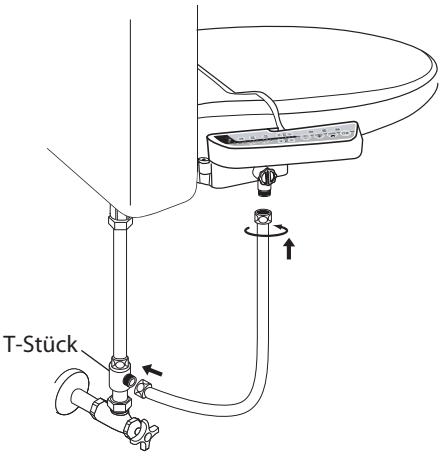

9 Installieren Sie die Halterung für die Fernbedienung an der Wand.

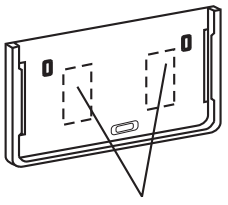

10 Setzen Sie die Batterien, wie abgebildet in die Fernbedienung ein

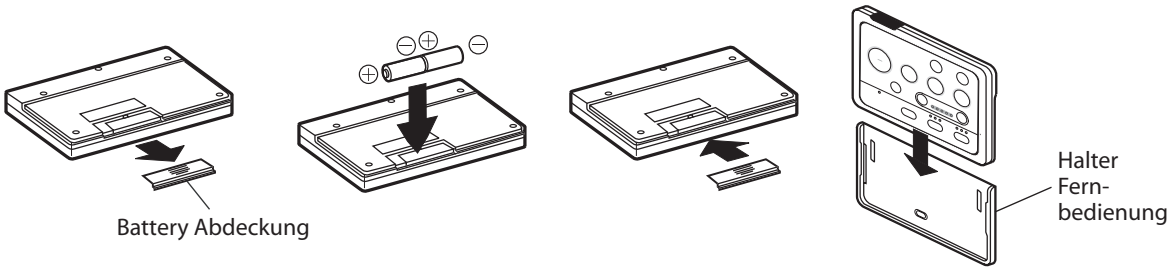

11 Führen Sie das Geruchsbeseitigungs-Modul in das Gerät ein.

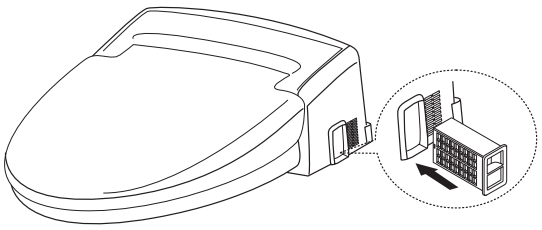

Montage Unterputz

1 Installation Wasser über Eckventil

- nehmen sie den Panzerschlauch (Zubehör) und schließen sie diesen zwischen Eckventil und der Popodusche NB09 an
- drehen sie den Wasserhahn auf. Überprüfen sie die Verbindung bzgl. Wasseraustritts

2 Installation Wasser über den Wasseranschluss Unterputz

- nehmen sie die Drückerplatte vom Spülkasten und entfernen sie die hintere Abdeckung, so dass sie direkte Sicht auf den Anschluss haben
- drehen sie die Wasserzuleitung zu
- schließen sie das T-Stück (Nr. 6) in Verbindung mit der Verbindungsmuffe (Nr. 7)* an und verbinden die Leitungen inkl. des Panzerschlauchs (Nr. 12)

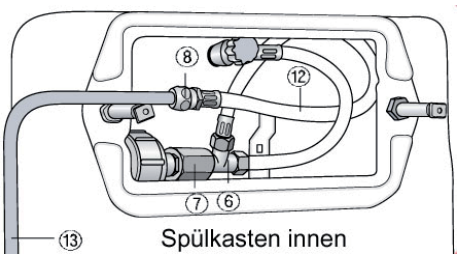

Spülkasten innen

- das Ende verbinden sie mit dem Rohr (Nr. 13)* in Verwendung der Muttern (Nr. 8)*
- Wasseranschluss fortsetzten und die Verbindung zur Popodusche NB09 herstellen
- öffnen sie das Eckventil und überprüfen sie die Verbindung bzgl. Wasseraustritts
- machen sie jeweils wie folgend abgebildet ein Loch um die Abdeckung zum Unterputzkasten wieder schließen zu können:

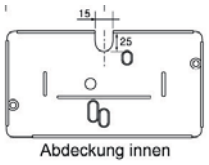

Abdeckung innen

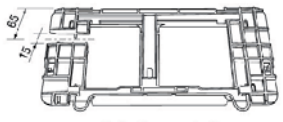

Befestigungsplatte

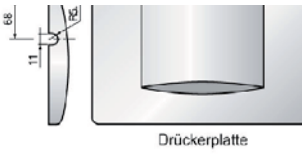

Drückerplatte

- montieren sie die einzelnen Abdeckungen wieder und schließen die Drückerplatte

*die Verbindungsmuffe (Nr.7) ist aufgrund des funktionellen T-Stücks überflüssig geworden.

Nicht im Lieferumfang enthalten sind folgende Bauteile (wie oben angegeben), die aber speziell für einen Anschluss Unterputz wichtig sind:

- Rohr (Nr.13) direkt über ihren Fachhändler zu beziehen
- Mutter (Nr. 8) direkt über ich ren Fachhändler zu beziehen

Deinstallation / Demontage

Unten folgen die Instruktionen für eine notwendige Deinstallation der Dusch-WC bei Umzug etc.

1. Entfernen Sie den Stecker aus der Steckdose
2. Schließen Sie den Wasserzugang, in dem Sie das Absperrventil im Uhrzeigersinn zudrehen und leeren Sie den Wassertank vollständig
3. Entfernen Sie den flexiblen Schlauch vom Gerät und lösen Sie das Gerät aus seiner Halterung

Um das Gerät zu lösen, schieben Sie das Gerät leicht angehoben nach vor, wie auf der Abbildung angezeigt

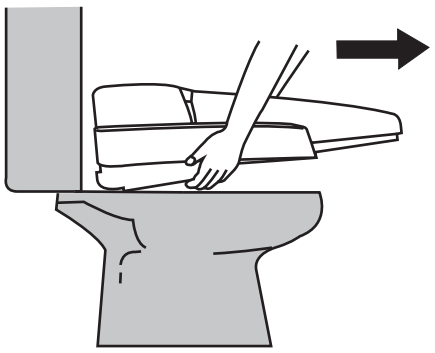

4. Lösen Sie den Ablass-Stöpsel unterhalb des Geräts und leeren Sie den Tank vollständig

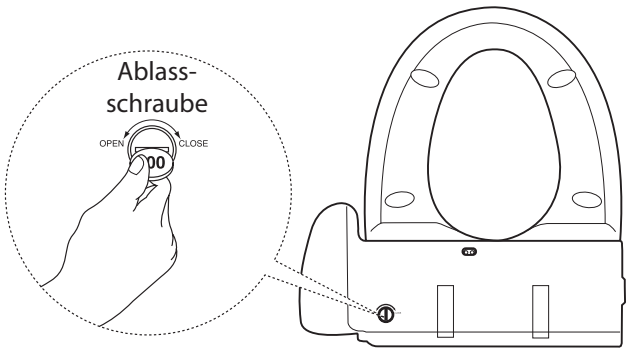

5. Entfernen Sie den Panzerschlauch und das T-Stück
6. Verbinden Sie den Wasser-Schlauch mit dem abgedrehten Absperrventil
7. Öffnen Sie das Absperrventil in dem Sie es gegen den Uhrzeigersinn drehen und überprüfen Sie die Verbindungen nach eventuellem Wasseraustritt
8. Montieren Sie den originalen Toilettensitz und - deckel

Wartung

Reinigung des Siebes

1. Schließen Sie den Wasserzugang indem Sie das Absperrventil im Uhrzeigersinn zudrehen und leeren Sie den Wassertank vollständig
2. Entfernen Sie das Sieb indem Sie es gegen den Uhrzeigersinn herausdrehen
3. Nachdem Sie das Sieb gesäubert haben, drehen Sie es im Uhrzeigersinn wieder hinein
4. Öffnen Sie das Absperrventil

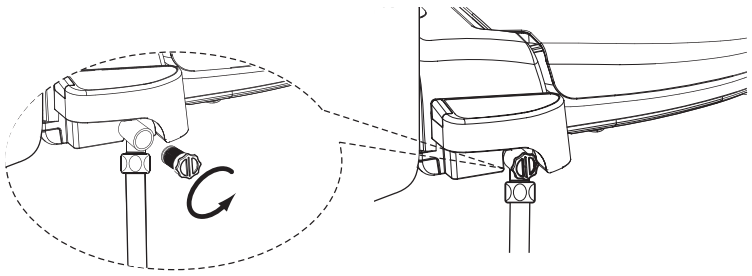

Reinigung der Düse

1. Drücken Sie die Tasten „CLEANSING“ und „BIDET“ gleichzeitig.
   Beide Düsen fahren gleichzeitig heraus
2. Reinigen Sie die Düsen mit einer kleinen Bürste von Hand. Um die Düsen wieder in ihre gesicherte Lager-Position zu bringen, drücken Sie die „STOP“ Taste. Nach dem Einfahren wird automatisch die Selbstreinigung gestartet

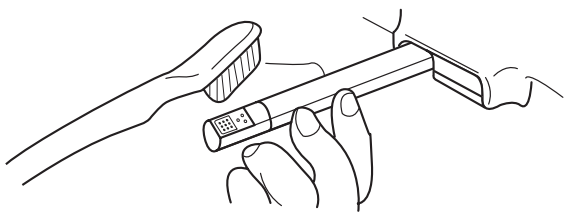

Wartung

Äußere Reinigung

- Das äußere Gehäuse des Dusch-WC's ist aus Plastik gefertigt, welches durch Bürsten, Chemikalien, usw. beschädigten werden kann. Benutzen Sie keine Chemikalien

- Reinigen Sie das Gerät mit einem leicht angefeuchteten weichen Tuch. Sprühen Sie kein Wasser auf das Gerät

- Entfernen Sie den Netzstecker vor der Reinigung. Seien Sie vorsichtig und achten Sie darauf, dass kein Wasser zum Stecker oder zur Steckdose spritzt

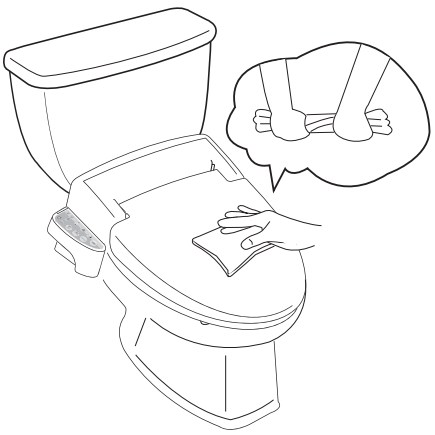

Wassertank leeren

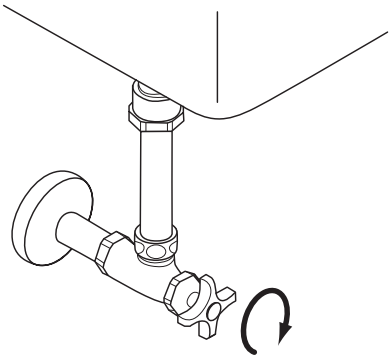

1. Ziehen Sie zuerst den Netzstecker
2. Schließen Sie das Absperrventil indem Sie es im Uhrzeigersinn zudrehen
3. Ziehen Sie die Dusch-WC von der Toilette
   Siehe hierfür Seite 37 (Deinstallation / Demontage)
4. Nachdem Sie einen Eimer (4l) unter das Gerät gestellt haben, öffnen Sie den Stöpsel und leeren den Tank vollständig

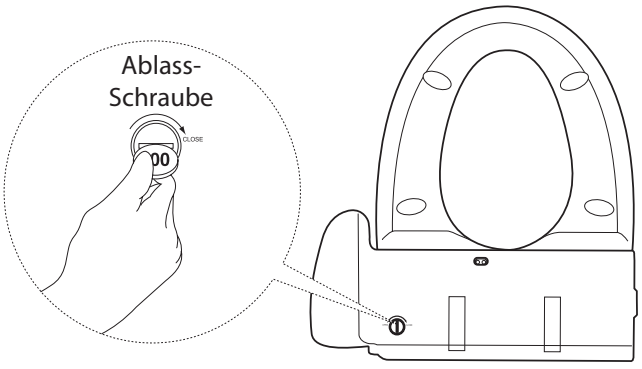

Frostschutz im Winter

1. Stecken Sie den Netzstecker ein und überprüfen Sie, ob das Gerät an ist.
2. Schalten Sie den „WATER“ Level nicht ab und stellen Sie die Wassertemperatur auf „LO“ oder höher
3. Leeren Sie den Wassertank bei längerer Nichtbenutzung

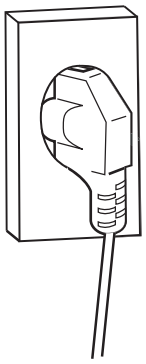

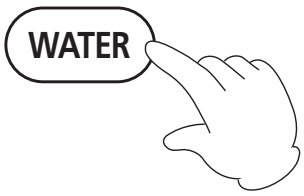

Fehlerbehandlung

Bevor Sie den Kundendienst kontaktieren, überprüfen Sie bitte folgende Hinweise:

Problembeschreibung	Mögliche Ursachen
Gerät funktioniert nicht	• Kein Strom • Der Netzstecker ist nicht eingesteckt • Stromausfall • Drücken Sie ein bliebige Tast auf der Fernbedienung
CLEANSING, BIDET, DRY, AUTO CLEAN, funktionieren nicht	• Etwas verdeckt den Sitz ☞ Haben Sie überprüft ob etwas auf der Sitzoberfläche liegt? Das Gerät wird nur dann aktiv, wenn die Haut des Benutzers den Sitzsensor berührt
Die Fernbedienung funktioniert nicht immer	• Batterien zu schwach und sollten ausgetauscht werden.
Fehlfunktionen der Fernbedienung	• die Batterien in der Fernbedienung sind zu schwach und sollten gewechselt werden • die Fernbedienung befindet sich nicht in Reichweite des Dusch-WC's
Kein Wasser	• Das Absperrventil ist zu • Die Wasserzufuhr ist unterbrochen
Niedriger Wasserdruck	• Was Wasserdruck-Level ist auf „LO“ • Das Sieb ist veerstopft
Niedrige Wasser-temperatur	• Das Wassertemperatur-Level ist ausgeschalten oder auf „LO“ • Warmwasser, welches auf „MID“ eingestellt ist, ist für 40 Sekunden verfügbar. Danach braucht es 3 Minuten um wieder zur ausgewählten Temperatur zu gelangen
Der Sitz ist nicht warm	• Das Sitztemperatur-Level ist ausgeschalten oder auf „LO“
Die Föhnluft ist nicht warm	• Das Warmluft-Level ist ausgeschalten oder auf „LO“

Produkt-Spezifikationen

Gerät			NB-R770E
Stromzufuhr			220-240V~, 50/60Hz
Max. Strom-Auschöpfung			660-785W
Länge des Stromkabels			1.4m
Wasseranschluss			Direkter Anschluss an die Wasserzufuhr
Wasserdruck			98-735kPa
Popodusche	Wasser durch-fluss	CLEANSING	1.1 *l* /min
		BIDET	1.3 *l* /min
	Wasserdruck-Einstellung		5 Stufen
	Sitzheizung Temp. Einstellung.		Normale Temperatur, 34˚C, 37˚C, 40˚C
	Heizleistung		600-714W
	Sicherheits-vorrichtung		Thermosicherung, Thermostat, Wasserlevel-Sensor
Sitz-heizung	Temperatur Einstellung		Normale Temperatur, 35˚C, 38˚C, 40˚C
	Heizleistung		55-65W
	Sicherheitsvorr.		Thermostat
Trocknen	Temperatur Einstellung		Normale Temperatur ~ 50˚C (5 Stufen)
	Heizleistung		150-178W
	Sicherheitsvorr.		Thermosicherung, Bimetall
Geruchsabsaugung			über Aktivkohlefilter
Wasserzufuhrtemperatur			3˚C ~ 35˚C
Umgebungstemperatur			3˚C ~ 40˚C
Produktgröße			(B)470mm x (L)530mm x (H)165mm
Gewicht			4.6 kg

Garantie

Garantie

• Wir garantieren, dass unsere Produkte unter normalen Umständen frei von Fabrikationsfehlern sind und eine Garantielaufzeit von 2 Jahren nach Warenkauf. Diese Garantie gilt nur für den Endkunden.

• Bei Defekten, kontaktieren Sie bitte den Händler oder ihren Kundendienst

Produkt Name	Blooming Bidet	Model Name	
Kaufdatum		Seriennummer	
Käufername		Garantie-dauer	2 Jahre ab Kaufdatum

Kostenlose Kundendienst Bestimmungen

• Während der Garantiezeit, wenn beim Produkt während normaler Bedienung ein Defekt auftritt, wird das Gerät kostenlos repariert.

• Auch während der Garantiezeit sind folgende Anwendungen kostenpflichtig:

(1) Beschädigungen, die vom Kunden durch Fahrlässigkeit oder Eigenverschulden verursacht wurden, oder Defekte durch falsche Reparatur oder Veränderung
(2) Defekt oder Beschädigung, verursacht durch Feuer, Gas, Überschwemmungen, Erdbeben, Blitzeinschlag oder andere natürliche Katastrophen, Ve rschmutzung oder abnormaler Stromzufuhr
(3) Defekt oder Beschädigung, verursacht durch Benutzung außerhalb des Haushalts (längere öffentliche Nutzung, innerhalb eines Fahrzeugs)
(4) Defekt oder Beschädigung, verursacht durch Misshandlung während dem Transport nach dem Kauf
(5) Defekt oder Beschädigung, verursacht durch Entfernung des Geräts nach erfolgter Installation
(6) Verschleiß von Bauteilen (Dichtungen, Filter, usw.)
(7) Neuinstallation der Popodusche NB09 nach Kundenwunsch
(8) Lesen Sie diese Bedienungsanleitung gründlich durch bevor Sie den Kundendienst kontaktieren, da anfallende Kosten bei unnötigen Service-Besuchen in Rechnung gestellt werden

MZ-Handelsagentur

MZ-Handelsagentur

An der Eisenschmelze 14
D-87527 Sonthofen

Tel : +49 (8321) 67 55 998
Fax : +49 (8321) 67 55 968

E-mail : info@mz-handel.eu
www.popodusche.de